JB5614 DEHUMIDIFYING EGG

PRODUCT APPLICATION:

This product is specifically designed to remove undesired moisture in the air that causes mildew.

PLACEMENT:

It can be placed in wardrobes, closets, shoe racks, and shelves, etc.

INSTRUCTIONS:

If the humidity indicator on the sides of the egg is BLUE (dry), the egg is ready for use.

If the humidity indicator on the sides of the egg is PINK (wet), the egg needs to be re-activated.

Warning: Before placing in the microwave or oven for re-activation, inspect the egg completely for any cracks or damage.

RE-ACTIVATION:

To re-activate the egg, remove the egg from its base and place the egg in the microwave on medium heat (600W) for 10 minutes.

WARNING: Egg will be extremely hot after re-activation. Wait at least 10 minutes before handling.

CAUTIONS:

- 1. Egg is made of multi-porous ceramic material and may break if dropped.
- 2. Do not open the rubber sealing pad on the bottom of the egg to prevent the moisture-absorbing granules from falling out.
- 3. Before each re-activation, check the egg for any damage or cracks. If the egg is damaged, discard immediately. Do not put in the microwave or oven for re-activation.
- 4. During re-activation, there may be some hissing sounds, this is due to the water vapors, this is completely normal and will not contaminate or damage your microwave or oven.
- 5. If needed, use a cloth to clean the egg. Do not immerse in water.
- 6. Do not put the base in the microwave or oven.

If you do not have a microwave, you can also re-activate the egg using a conventional oven

- 1. Remove the egg from its base.
- Turn the egg upside down and remove the sealing pad carefully to avoid any of the granules from falling out.
- 3. Place the egg in a ceramic or other oven safe mug.
- 4. Heat for 30 minutes at 148°C.

WARNING: Egg will be extremely hot, wait at least 10 minutes before handling and replacing the sealing pad.